


Trol-Lok™ Installation Instructions for Motorguide™ Trolling Motors

Before beginning the installation pull the rope and release the locking mechanism. With the bow arm raised place a block of wood between the deck channel and bow arm. After the tension is relieved the Trol~Lok™ can be installed.



1. Remove the handle from the rope and set aside.

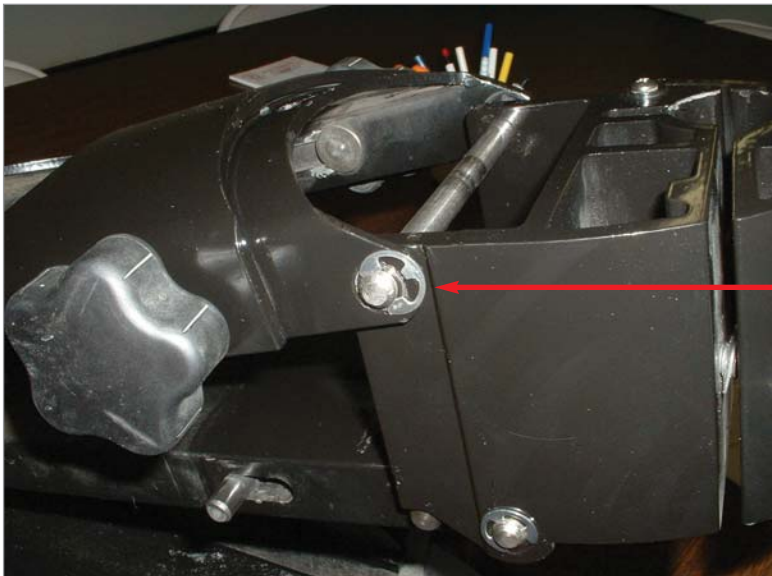

2. Remove the E-ring, washers, and spacer from the pivot arm.

**Remove e-ring and
slide out pin.**



3. Insert the Lock Down Rod into the Trol~Lok™ bracket and tighten.

Install Lock Down rod into support bracket and tighten with supplied bolt and lock washer.



4. Position the Trol~Lok™ support bracket as shown and re-install the pin, washers, and rope bracket and finish by placing the e-ring back on pin.

5. Route the rope end through the rope guide and through the hole in the handle and retie securely.

Re-insert the pin, washers and rope guide bracket and place e-ring back onto pin.

Note: The 4 outside set screws can be tightened to make the bracket square and stabilize the support bracket

PLEASE SEE BACK OF INSERT CARD FOR ADDITIONAL INSTALLATION INSTRUCTIONS.